

# Micro Differential Pressure Gage

WO81

## Manostar Gage WO70 General purpose compact type Micro Differential Pressure Gage

WO70

RoHS compliant

Utility model registration  
No.1996515  
No.2027772  
Design registration  
No.777491

FR51A

- Flag pointer is installed normally, which are easily to manage predicted value or threshold value of differential pressure.
- It is easy to convert polarity enable by piping connector.
- Even when the pressure becomes excessive, the original mechanism avoid damage to moving parts.
- Small hysteresis is realized by the silicone rubber diaphragm.
- The pointer is not fluctated by the original band-linked mechanism.

MS30

MS61A

MS65

EB3C

EMD8

EMD7

EMT6

EMT1

EMTGPI

EMT1H

EMP5

EMA3

EMRT1

HWS15

Combination of Manosys

Accessories

Application Cautions for use Maintenance



**WO70FV**  
(surface installation type)



**WO70PV**  
(panel installation type)

**<Example of main use field>**  
Air conditioning control system of factories  
Measuring negative pressure in bag filter and differential pressure in air conditioning  
Monitoring of pressure loss in filter  
Production lines of precision machine  
Air conditioning control system of buildings

**<Example of use>**  
Detector of a pressure loss in an air filter  
Measuring the inside pressure of clean rooms  
Detector of a pressure loss in a bag filter  
Measuring of dynamic pressure in a ventilator and an exhauster

\* (refer to p.93)

**Product code**




Unit	D	Pa
	E	kPa
Pressure range	Max. value of scale	
Piping connector	V	For vinyl or plastic tube
Type	F	Surface installation type
	PC	Panel installation type

◆ If you order or ask, please specify the product code and the pressure range code.

## Specification

Types	Surface installation type		Panel installation type		
	W070 F V		W070 P V		
Pressure units	Pa, kPa				
Pressure measuring method	Measuring differential pressure				
Flag pointer color	Red				
Pressure receiving element	Diaphragm				
Gas to be measured	Air or non-corrosive gas (not liquid)				
Scale indicating angle	Approximately 90 °				
Medium and ambient temperature	- 10 to + 50 °C (no freezing)				
Ambient humidity	90 % RH or less (no dewing)				
Withstanding pressure of instrument body	50 kPa (refer to p.104)				
Material of the outer case	Polycarbonate and polyamide				
Withstanding vibration	5 to 10 Hz Amplitude : 10 mm, 10 to 50 Hz Acceleration : 39 m/s <sup>2</sup> (each two hours on triaxial directions)				
Withstanding impact	100 m/s <sup>2</sup> (each six times on triaxial directions)				
Applicable piping	<ul style="list-style-type: none"> <li>· Vinyl or plastic tube or rubber tube (I.D. 6)··The resinous piping connectors (installed) for Vinyl or plastic tube</li> <li>· Metal tube (O.D. 6 ± 0.1)··Metal type piping connector (option) is needed.</li> <li>· Hard plastic tube (O.D. 6 × I.D. 4)··Metal type piping connector (option) and Inner sleeve set (XIN6 × 4) are needed.(refer to p.92)</li> </ul>				
Piping connector polarity	<ul style="list-style-type: none"> <li>· The piping connector indicated red color is high pressure side and blue color is low pressure side.</li> <li>· Enabling to convert the polarity by changing connectors of high pressure side for low pressure side.</li> </ul>				
Mass	Approximately 200 g.				
Accessory	One set of installation nuts(only for W070PV type)				
Pressure range codes	Pressure ranges	Standard installation position	Accuracy (at 20 °C)	Material of pressure receiving element	Withstanding pressure of receiving element (refer to p.104)
100 D	0 ~ 100 Pa	Installation position from upward horizontal to vertical is available.	± 2.5 % FS	Silicone rubber	20 kPa
200 D	0 ~ 200 Pa				
300 D	0 ~ 300 Pa				
500 D	0 ~ 500 Pa				
1000 D	0 ~ 1000 Pa				
2 E	0 ~ 2 kPa				
3 E	0 ~ 3 kPa				
5 E	0 ~ 5 kPa				
+ -100 D	-100 ~ +100 Pa				
+ -200 D	-200 ~ +200 Pa				
+ -300 D	-300 ~ +300 Pa				
+ -500 D	-500 ~ +500 Pa				

## W070 Installation position

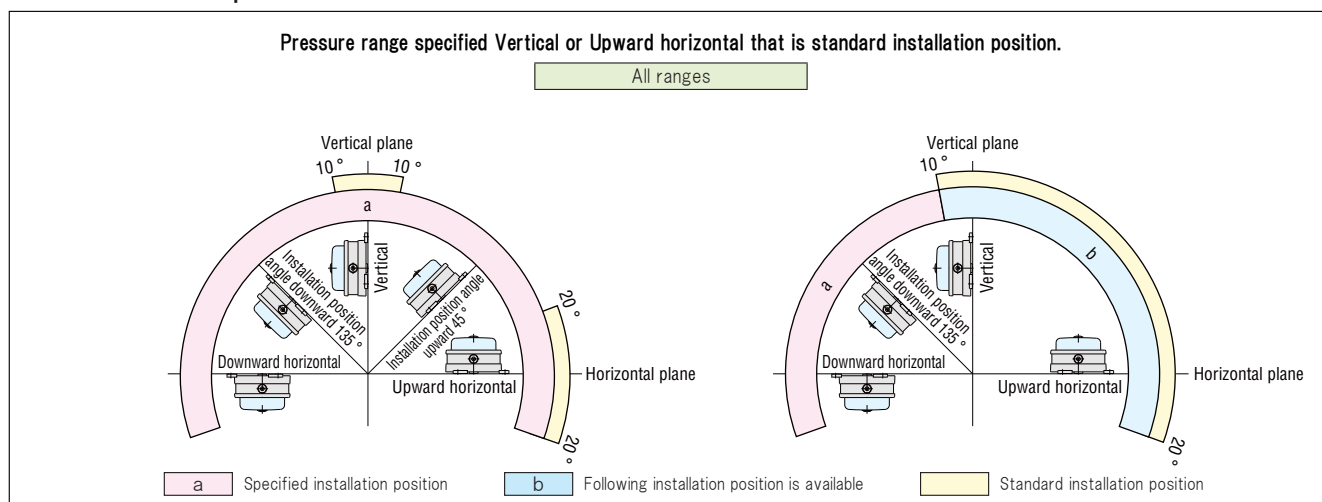

- ◆ In ordering out of above mentioned installation position, please order us or our agency beforehand. It must be adjusted before the factory shipment.
- ◆ In case of ordering standard installation position, you do not specify installation position. Please specify pressure range code in the specification table.




# Micro Differential Pressure Gage

## Manostar Gage WO70FV


### Outline drawing

The piping connector installed on side view.



#### VT connector for vinyl or plastic tube

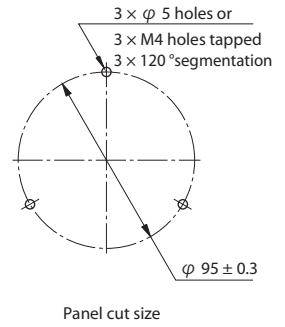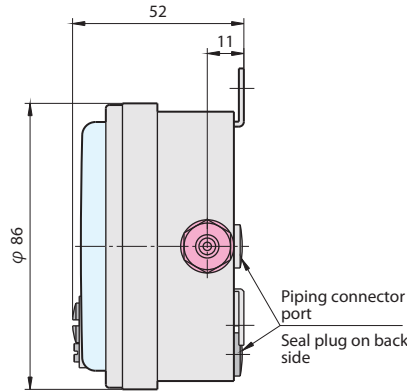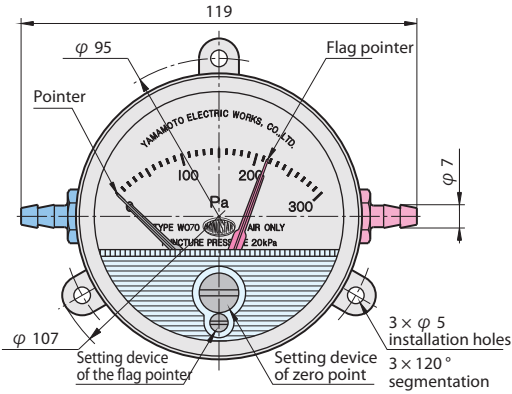

#### MT connector for metal tube



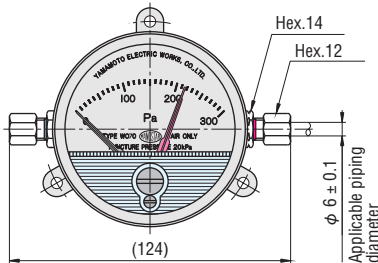


#### VR rotary connector for vinyl or plastic tube

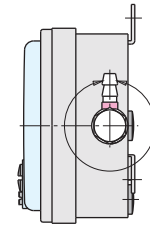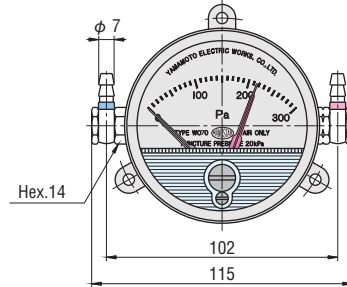


The piping connector installed on back view.



#### VT connector for vinyl or plastic tube

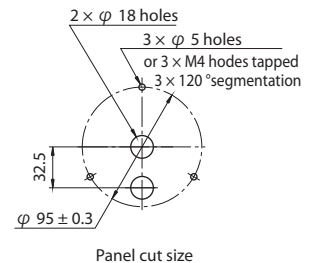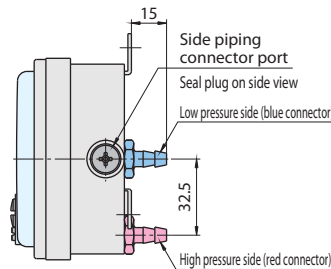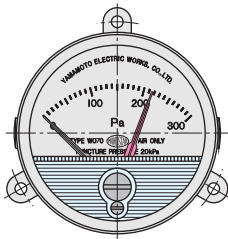

#### MT connector for metal tube

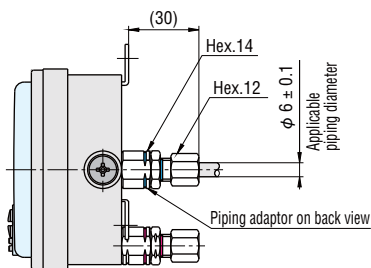

#### VR rotary connector for vinyl or plastic tube

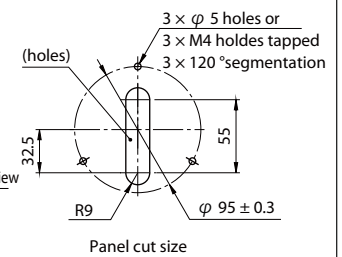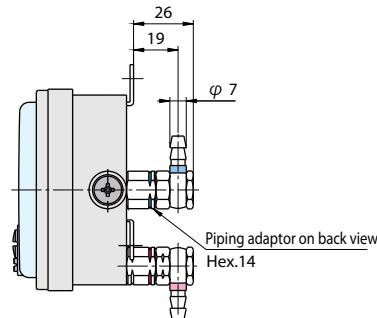

Caution

- When you install MT and VR connector on back view piping connector port, use the piping adaptor on back view (KGA70FBA-L, KGA70FBA-H). It is necessary to avoid interference with piping connectors and panel and to help put a locking spanner at this adaptor as a spacer.
- The piping connectors are installed in side connector ports on side view (factory-setting). When you use back view connector ports, remove seal plugs in back view connector ports, and install connectors to back view connector ports as shown in the above outline drawing (both high pressure side and low pressure side). Install seal plugs in side connector ports and be careful that the O-rings do not drop out from side connector port.
- Do not apply excessive torque more than necessary, otherwise it will damage the instrument body.  
Tighten the piping connectors with the torque of 1 N·m.  
Tighten the seal plugs with the torque of 0.5 N·m.  
(Be sure to use a locking spanner at connectors to tighten the cap nut of metal tube. Be careful not to let the tightening torque directly load to the main body of the instrument.)

WO81

WO70

FR51A

MS30

MS61A

MS65

EB3C

EMD8

EMD7

EMT6

EMT1

EMTGP1

EMT1H

EMP5

EMA3

EMRT1

HWS15

Combination of Manosys

Accessories

Application Cautions for use Maintenance

## Manostar Gage W070PV

### Outline drawing

**VT connector for vinyl or plastic tube**

Pointer, Flag pointer, Setting device of the flag pointer, Setting device of zero point, Four sets of M3 screw, Seal plug, Low pressure side (blue connector), High pressure side (red connector), Panel cut size

**MT connector for metal tube**

Applicable piping diameter, Hex.12, Hex.14

**VR rotary connector for vinyl or plastic tube**

Hex.14, phi 7

**Caution**

Tighten the piping connectors with the torque of 1 N·m.  
 Tighten the seal plugs with the torque of 0.5 N·m.  
 Do not apply excessive torque more than necessary, otherwise it will damage the instrument body.  
 (Be sure to use a locking spanner at connectors to tighten the cap nuts of metal tube. Be careful not to let the tightening torque directly loaded to the main body of the instrument.)

### How to install W070PV

Spacer nut

- Remove four sets of a M3 nut, a spring washer and a plain washer from the packing bag.  
(Do not remove spacer nuts from set screws.)
- After installing the instrument body on the panel, set a plain washer and a spring washer. Then tighten a M3 nut from the back side of panel.

M3 nut, Spring washer, Plain washer, Max. thickness installed panel 5 mm

**Caution**

If you install the instrument on the panel without spacer nuts, the instrument body will be broken.

### Caution for changing back view piping connectors of W070FV and W070PV

**Caution**

W070 model polarity of back view connector is decided to high and low pressure side.  
 In case of installing the connectors to back view connector ports, install the connector of high pressure side in the port which the sign of "HIGH" is displayed and the connector of low pressure side in the port which the sign of "LOW" is displayed.


- W081
- W070
- FR51A
- MS30
- MS61A
- MS65
- EB3C
- EMD8
- EMD7
- EMT6
- EMT1
- EMTGP1
- EMT1H
- EMP5
- EMA3
- EMRT1
- HWS15
- Combination of Manosys
- Accessories
- Application Cautions for use Maintenance

# Micro Differential Pressure Gage

## Manostar Gage W070 model Scale table


### Single pressure range

### Zero point center range

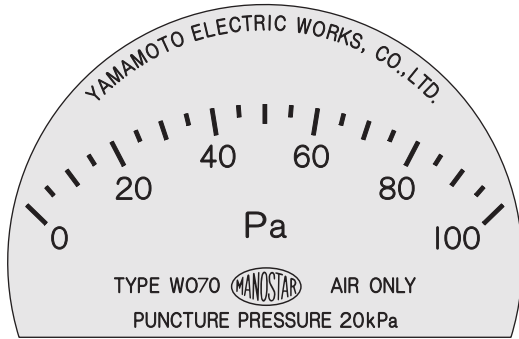


Pressure range	Min. scale
0 ~ 100 Pa	5 Pa
0 ~ 1000 Pa	50 Pa


Actual size

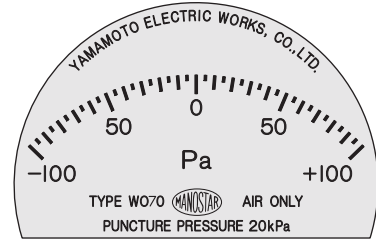


Pressure range	Min. scale
-100 ~ +100 Pa	5 Pa

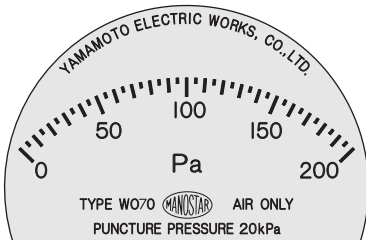


Pressure range	Min. scale
0 ~ 200 Pa	5 Pa

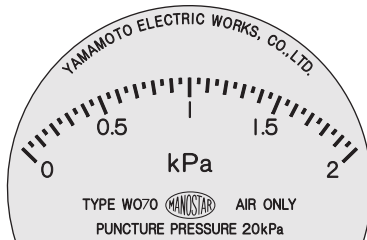


Pressure range	Min. scale
0 ~ 2 kPa	0.05 kPa

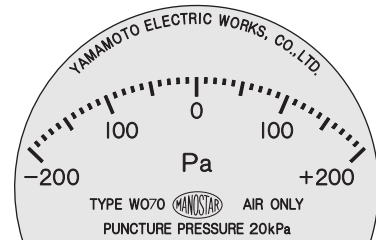


Pressure range	Min. scale
-200 ~ +200 Pa	10 Pa

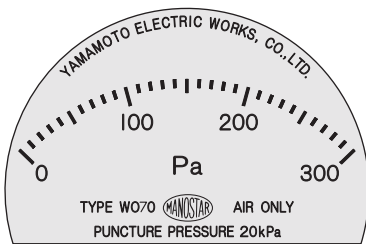


Pressure range	Min. scale
0 ~ 300 Pa	10 Pa

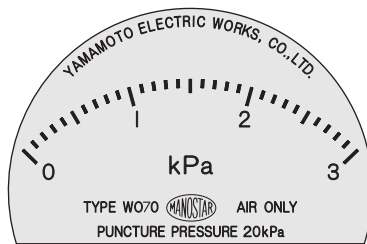


Pressure range	Min. scale
0 ~ 3 kPa	0.1 kPa

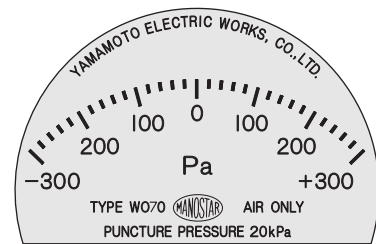


Pressure range	Min. scale
-300 ~ +300 Pa	20 Pa

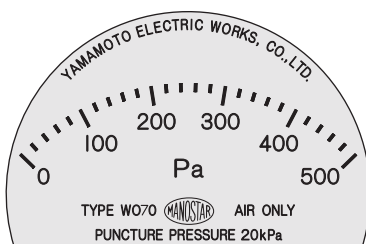

Pressure range	Min. scale
0 ~ 500 Pa	20 Pa

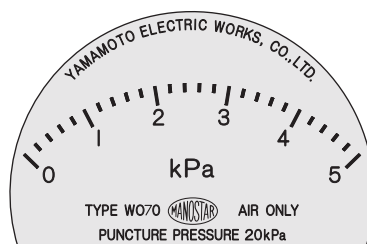

Pressure range	Min. scale
0 ~ 5 kPa	0.2 kPa

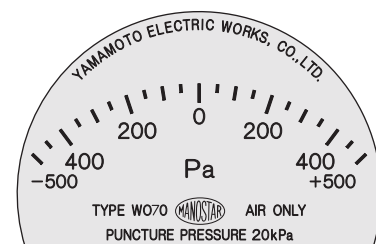

Pressure range	Min. scale
-500 ~ +500 Pa	50 Pa

WO81

W070

FR51A

MS30

MS61A

MS65

EB3C

EMD8

EMD7

EMT6

EMT1

EMTGP1

EMT1H

EMP5

EMA3

EMRT1


HWS15

Combination of Manosys

Accessories

Application Cautions for use Maintenance

## Main structure

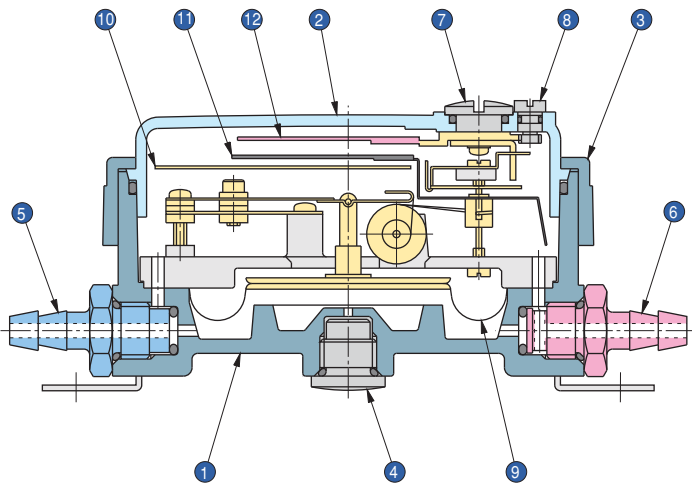

No.	Name
1	Housing
2	Clear cover
3	Flame of wall hanging
4	Seal plug
5	Low pressure side piping connector (blue)
6	High pressure side piping connector (red)
7	Setting device of zero point
8	Setting device of the flag pointer
9	Diaphragm
10	Scale plate
11	Pointer
12	Flag pointer

## Accessory for W070 RoHS compliant

<p><b>MT connector(ring joint type)</b></p> <p>These piping connectors can be connected to metal tube made from copper and aluminum and so on (O.D. 6, tolerance <math>\pm 0.1</math>). When this connector is connected to hard plastic tube (O.D. 6, I.D. 4), remove the sleeve made of brass and use the resinous inner sleeve set (XIN6 <math>\times</math> 4, refer to p.92) that is the optional accessory.</p>	<p><b>High pressure side MT connector</b></p> <p>Product code KGA70MT-H</p> 	<p><b>Low pressure side MT connector</b></p> <p>Product code KGA70MT-L</p> 	
<p><b>VR connector</b></p> <p>These piping connectors are rotary elbow type and can be connected to vinyl, plastic or rubber tube of I.D. 6.</p>	<p><b>High pressure side VR connector</b></p> <p>Product code KGA70VR-H</p> 	<p><b>Low pressure side VR connector</b></p> <p>Product code KGA70VR-L</p> 	
<p><b>Piping adaptor on back view</b></p> <p>When you install MT and VR connector in back side connector port of W070FV, use the backview piping adaptor. It is necessary to avoid interference with connectors and panel. It is also necessary as a spacer to help put a locking spanner at this adaptor.</p>	<p><b>High pressure side back view piping adaptor (for FV type)</b></p> <p>Product code KGA70FBA-H</p> 	<p><b>Low pressure side back view piping adaptor (for FV type)</b></p> <p>Product code KGA70FBA-L</p> 	
<p><b>Reserve connector (standard accessories)</b></p>	<p><b>High pressure side VT connector</b></p> <p>Product code KGA70VT-H-P</p> 	<p><b>Low pressure side VT connector</b></p> <p>Product code KGA70VT-L-P</p> 	<p><b>Seal plug</b></p> <p>Product code KGA70PLG</p> 

\* Because of quality improvement or any reason, some specifications are possibility of changing without notice.

W081

W070

FR51A

MS30

MS61A

MS65

EB3C

EMD8

EMD7

EMT6

EMT1

EMTGP1

EMT1H

EMP5

EMA3

EMRT1

HWS15

Combination of Manosys

Accessories

Application Cautions for use Maintenance

## Product Warranty

### Warranty Period

This product warranty is valid for one year from the date of delivery to a place specified by an ordering party who has transacted directly with Yamamoto Electric Works Co., Ltd.

### Coverage

If a product breaks down due to a reason for which we are responsible during the warranty period and you return the product to us, we will either repair or replace the product free of charge.

This warranty does not cover:

- (1) Usage of the product under any inappropriate conditions or environment contrary to what is described in our product catalog, specifications or manual.  
Handling or usage of the product other than as described in our product catalog, specifications or manual.
- (2) Breakdown due to a reason other than a fault within our product.
- (3) Any product that has been modified or repaired by a party other than us.
- (4) Any breakdown due to a reason that was not foreseeable based on scientific and technical standards applied at the time of shipment.
- (5) Any breakdown due to a reason not attributable to us such as a natural calamity or other disaster.

These terms of warranty represent our entire liability with respect to the product, and we shall have no liability for any other loss arising in connection with a breakdown of the product.

\*This product warranty is only valid within Japan.

This document is a translation from the original Japanese version, and the original Japanese version has priority over this translation.

Be sure to refer to the original Japanese for the details of this warranty.



Caution

The Japanese original document shall always take precedence over the translated versions.

You should be sure to refer to the Japanese original document.

Sole Agent  **Manostar CO.,LTD.**

1-2-3, Nishishiriike-cho, Nagata-ku, Kobe,  
Hyogo 653-0031 JAPAN  
TEL. +81 (78) 621-7000 FAX. +81 (78) 621-7788

Manufacturer

 **Yamamoto Electric Works Co., Ltd.**

1-2-3, Nishishiriike-cho, Nagata-ku, Kobe,  
Hyogo 653-0031 JAPAN  
TEL. +81 (78) 631-6000 FAX. +81 (78) 631-6020